

Dog Crate Bumper Pads Sewing Pattern

www.kevinandamanda.com

for Small, Medium, and Large Crates

SMALL crate size: 24" L x 20" W x 21" H

MEDIUM crate size: 26" L x 23" W x 24" H

LARGE crate size: 42" L x 36" W x 28" H



Dog Crate Bumper Pads Sewing Pattern

www.kevinandamanda.com

Recommended Fabric:

54" to 60" home decor fabric

Fabric Requirement:

SMALL

Cover - 1 $\frac{7}{8}$ yard

Padding - $\frac{1}{2}$ " thick foam: 9 $\frac{1}{4}$ " x 61 $\frac{3}{4}$ "

MEDIUM

Cover - 2 $\frac{3}{4}$ yard

Padding - $\frac{1}{2}$ " thick foam: 11 $\frac{1}{4}$ " x 92"

LARGE

Cover - 3 $\frac{1}{8}$ yard

Padding - $\frac{1}{2}$ " thick foam: 13 $\frac{1}{4}$ " x 102"

Optional for All Sizes

3 $\frac{1}{2}$ yards coordinating ribbon for bumper ties

52" Cutting Line for LARGE		
46.5" Cutting Line for MEDIUM		
31.5" Cutting Line for SMALL		
Bumper Pad Pattern Cut two pieces on fold .		
.....
12" Stitching line for LARGE		
.....
10.5" Stitching line for MEDIUM		
.....
9.25" Stitching line for SMALL		
	10.5" Cutting Line for SMALL	12.5" Cutting Line for MEDIUM
		14.5" Cutting Line for LARGE
Center Fold		


15.75" x 1.25" - Bumper Tie - Cut 8 pieces

Dog Crate Bumper Pads Sewing Pattern


www.kevinandamanda.com

Step One - Ties


Prepare 8 ties (or skip this step and use coordinating ribbon)



A. Fold tie in half lengthwise with WRONG sides together. Press to crease.



B. Unfold, then fold the top edge down and the bottom edge up WRONG sides together so they meet at the crease. Press to crease.

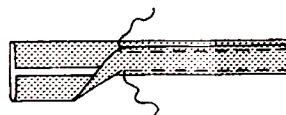


C. Fold tie in half lengthwise, hiding raw edges, to bring pressed edges together. **Stitch** both long edges.


Dog Crate Bumper Pads Sewing Pattern

www.kevinandamanda.com

Step Two - Bumper

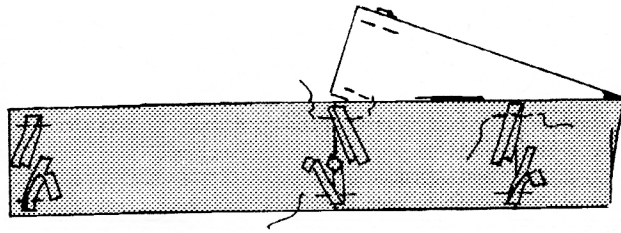

A. Fold each tie (or ribbon) in half widthwise and pin to one bumper piece. Pin on **RIGHT** side of fabric, having the fold **even** with the raw edges. Pin one tie on each stitching line (top and bottom) and the remaining four ties to each corner of the bumper, with the fold 1/2" in from the short edge. Baste in place.

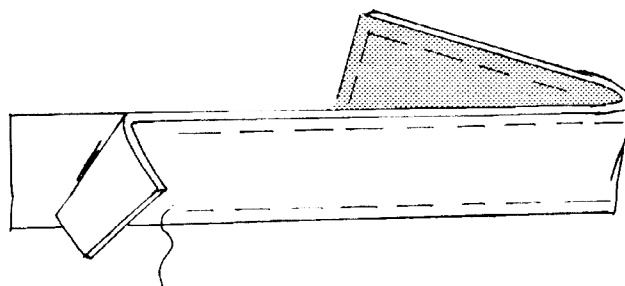


B. Baste foam to **WRONG** side of remaining bumper piece. Use big hand basting stitches and a long needle.


Dog Crate Bumper Pads Sewing Pattern

www.kevinandamanda.com

Step Three - Bumper

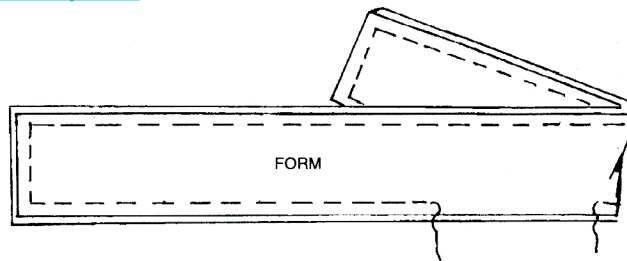

C. With RIGHT sides together, **stitch entire outer edge** of bumper sections together, leaving an opening to turn. Watch out for the loose ends of the ties.
Trim Corners.

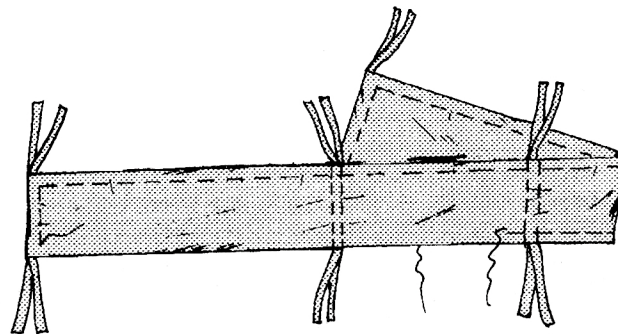

D. Turn bumper right side out through opening. Hand stitch opening closed.

E. Stitch along stitching lines and then a 1/2" over from those stitching lines so that the ties are in the center of both rows of stitching. Remove basting.